

Maintenance and cleaning of GRADO In Ear models: iGi and GR8

The model iGi is equipped with a permanent metal filter; cleaning only is required.

The GR8 is built differently, it has a permanent filter and a replaceable one. These filters will not let the earwax get into the driver. In most cases there will no need to replace the filter. The user will only have to clean the "ear mould" with a cotton swab.

Should an accumulation of wax on the filter be visible, the removable earwax filter should be replaced.


A "GR8 maintenance kit" is available from your GRADO dealer.

The iGi is sold with 3 "ear mould" the GR8 with 2. We suggest you use the ones that best fit your ears. The "communion" of the ear canal with the "ear moulds" is paramount for:


- An adequate bass response
- A good isolation from ambient noise

Instructions for the replacement of the removable filter of the GR8

1. Remove the "ear mould", (ear tip in the picture below)
2. Make sure the removable earwax filter is in place if not, go to operation 5

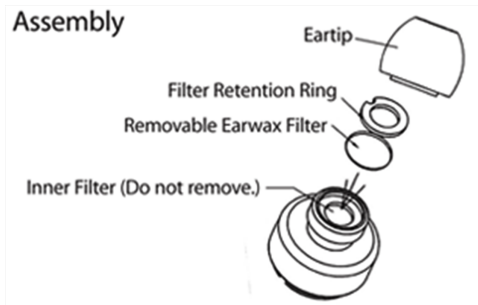

3. With a pointy object (style safety pin) remove the filter retention ring

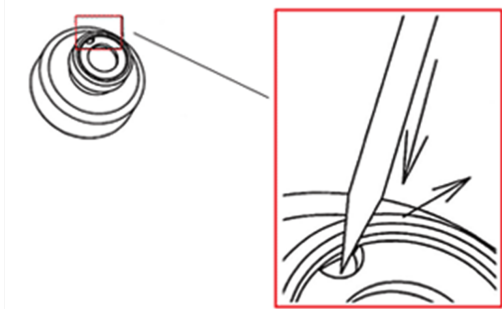

4. Remove the clogged removable earwax filter
5. Install a new filter and make sure it is well fitted
6. Install the filter retention ring
7. Install the "ear moulds" (ear tips in the picture)